


HEM-WLC-4G

4G Wireless communication modules


- ✧ Support for MERITEK/ZENIT HMI plug-and-play, no complex configuration required
- ✧ High-speed 4G LTE mobile network technology
- ✧ Special installation design, no need to worry about signal shielding
- ✧ Simple and reliable installation, perfectly integrated with control cabinet
- ✧ Front-Facing waterproof rating IP66

4G Wireless Specification	GSM/GPRS/EDGE/UMTS/HSDPA/HSUPA (3G) : 2100MHz LTE (4G) : 700/900/1800MHz (Band 28/8/3)	
Communication Interface	USB 2.0 Type A (F)	Requires the use of a USB 2.0 Cable Type A Male to Type A Male to connect with the HMI.
Power	Power Input	Powered via USB, no additional power supply required.
	Power Consumption	2.2W (5V, 440mA)
Environment	Protection Structure	Front: IP66, Rear: IP20
	PCB Coating	Yes
	Operating Temp	0~50°C
	Storage Temp	-20 ~ 60°C
	Relative Humidity	10%~90% (40°C Non-condensing)
	Withstand Voltage	500VAC/20mA/1 Min.
	Vibration Endurance	5 to 9Hz Half-amplitude: 3.5mm ; 9 to 150 Hz Constant acceleration: 19.6m/s ² (2G) ; X, Y, Z: 10times (IEC61131-2 complaints)
Dimension / Weight	Dimensions W x H x D	141 x 63 x 34 (mm)
	Cut-out	132 x 54 (mm)
	Weight	95 (g)
Certification	CE	

◆ Dimensions Drawing

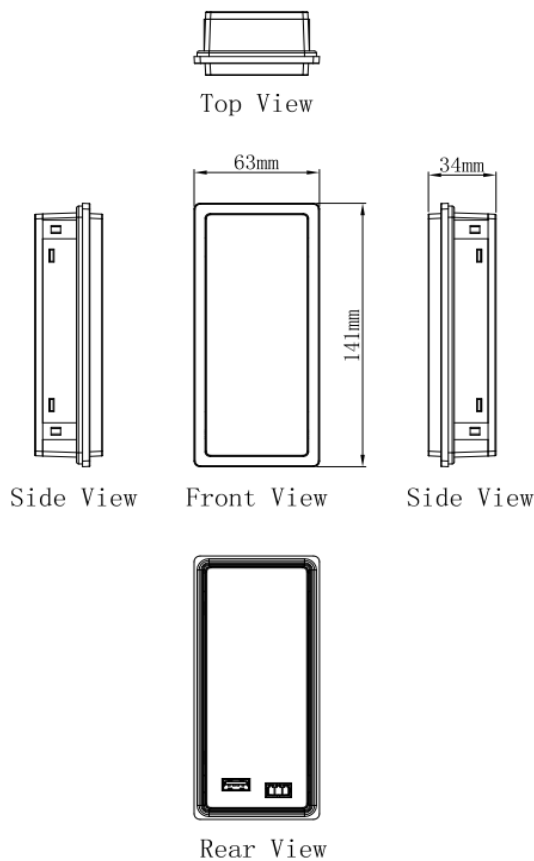


◆ Accessory

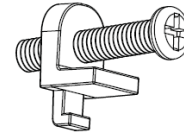


Hook & Screws x4

◆ Cut-out & Installation

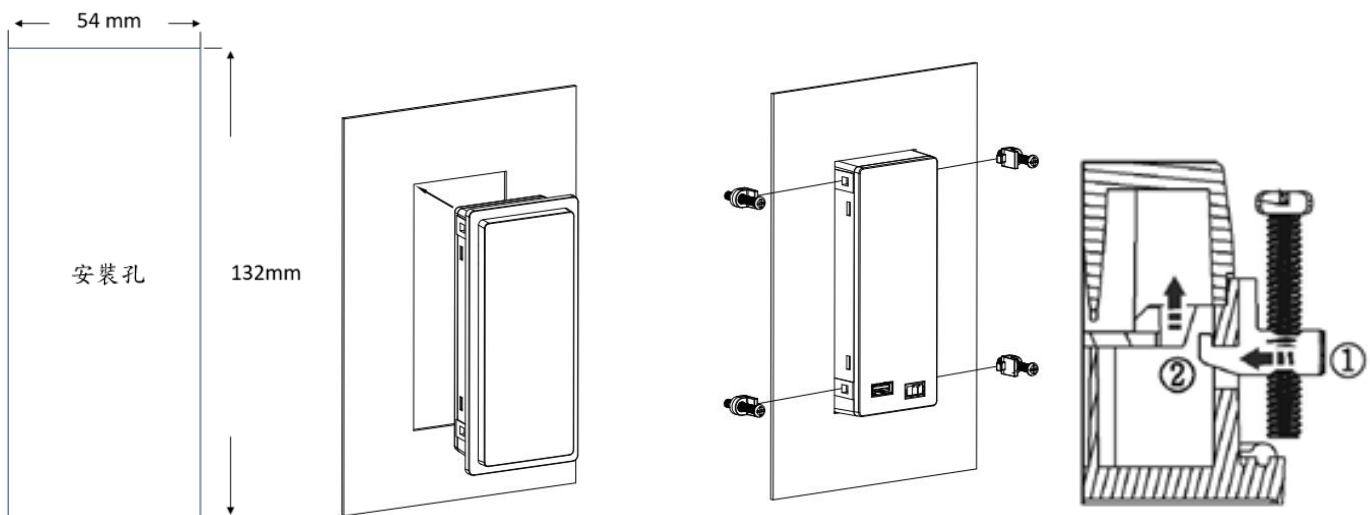

- Place the HEM-WLC-4G into the mounting hole until the waterproof ring contacts the enclosure of the control box.
- Insert a hook into each fixing hole, then pull up the hook to prevent it from slipping away.
- Tighten the screws evenly with moderate torque (about 0.16N · m). Failure to tighten the screws may result in the product falling off, malfunction, or short circuit. Over-tightening the screws may cause deformation of the enclosure.

◆ Usage Instructions

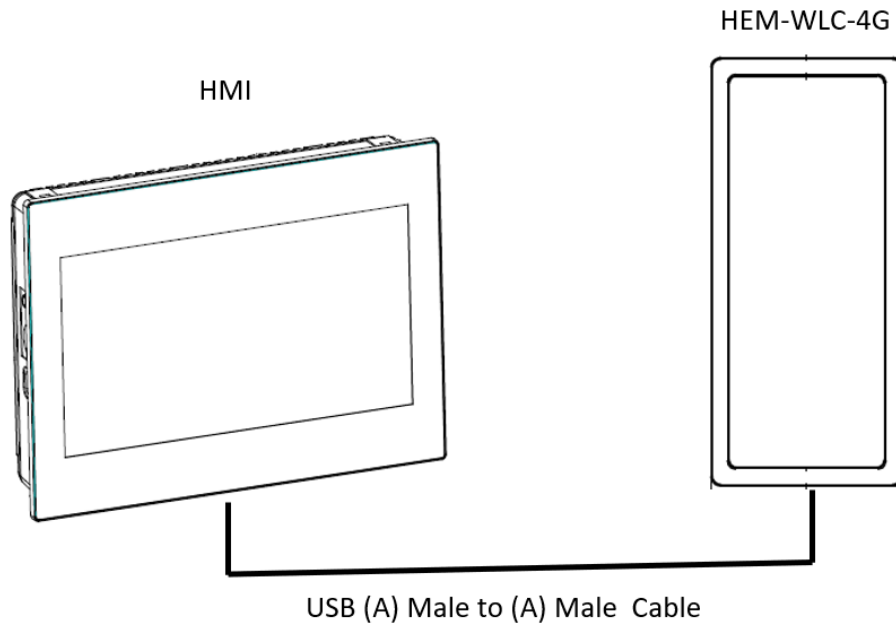

- Requires the use of a USB 2.0 Cable Type A Male to Type A Male to connect with the HMI.