




Introduction

MBs-CM25E is an Ethernet interface module of MBs-PLC series. It enables the capability of MBs-PLC to access the other controllers or devices thru the Ethernet network actively(client) or passively(server). Besides the MBs MA model CPU, all MC, MN CPU can be remotely monitored and diagnosed thru Internet by using this module. While operation, this module uses the port4 of CPU to communicate with Internet. This module also provides a generic RS232 Port3 for peripheral application. While installation, the module can be mounted on DIN-Rail or securely be fastened by screw.

Dimension

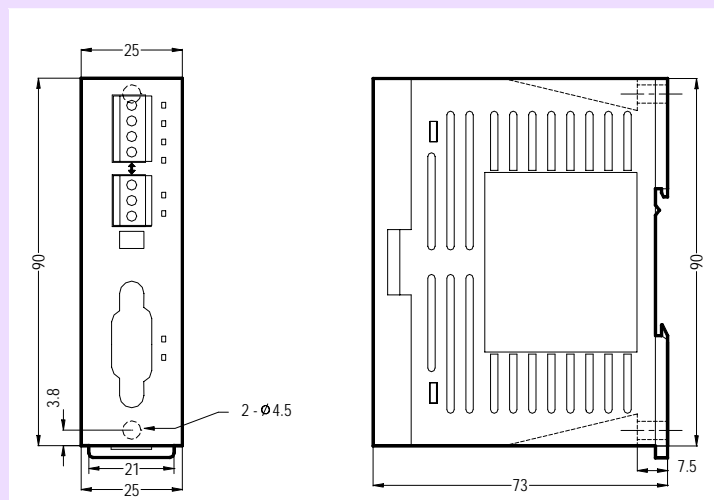

Features

- Support multiple clients access
- Support server or client mode
- Support MERITEK or Modbus-TCP protocol
- IP based access control
- 230.4 Kbps high speed baud rate for serial interface
- Network on line configuration

Specifications

Network Interface- 10BaseT

Network Protocol- TCP/IP

Application Protocol- MERITEK, Modbus-TCP

Operation Principle- Serial to Ethernet

conversion PLC interface- Port4 RS485 interface

Generic Port- Port3, RS232 interface

PLC Communication Speed- 230.4 Kbps (Max.)

Working Mode- Server or client

Application IP Port number-

Modbus-TCP – 502

MERITEK – 500 or defined by user

Max. TCP Connection – 10 sessions

Security Protection- IP based access control

Configuration - On line network configuration

Indicators- RX, TX and LINK LED indicator

Power Consumption- 5V, 200mA

Operating Temperature- 0 ~ 60 °C

Storage Temperature - -20 ~ 80 °C

Dimension- 25(W)x90(H)x73(D) mm

Indicators

Module Working Status Indicator

RUN: Fast blink when works normally. Slow blink when on line configuration is proceed.

Network Indicators

LINK: When lit means connection OK.

TX: When lit means a message is being transmitted by this module

RX: When lit means network exist a message

Port4 indicators


TX: When lit means a message is being transmitted by port4.

RX: When lit means a message is being observed in the port4 lines.

Port3 indicators

TX: When lit means a message is being transmitted by port4.

RX: When lit means a message is being observed in the port4 lines.

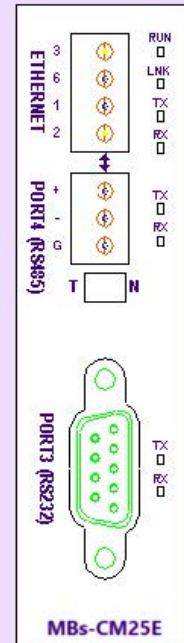

Switches and Connectors

Ethernet Connector


To reinforce the resistance to the machine vibration, instead of using conventional RJ-45 connector, this module use a 4 pin Euro connector for network connection. The labels 3,6,1,2 near this connector correspond to the standard RJ-45 signal. that means 3 for RX+(WHITE+GREEN), 6 for RX-(GREEN), 1 for TX+(WHITE+ORANGE) and 2 for TX-(Orange).

Port4 Connector


RS485 interface. +,- connected to the positive and negative polarity signal of RS485 interface respectively. G is signal ground.

Port4 Terminator Switch

Its position is beneath the Port4 connector, use this switch to determine if the built in terminator for Port4 is engaged or not.



No Terminator(OFF)



With Terminator(ON)



Port3 Connector

RS232 interface DB9F connector. The Pin 2 is TX output, the Pin 3 is RX input and the Pin 5 is signal ground.

Jumper Setting

Password Protection

When the password has been entered (enabled), the user will be requested to enter a matched password each time when perform the configuration via configuration utility 'ether_cfg.exe'. In other words, in case the user forget the password then he/she no longer can modify the module's configuration. To prevent this situation from occurring, there provides a jumper JP1 to disable the password protection temporary.

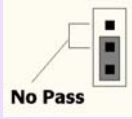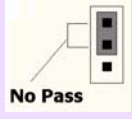Password Protection	JP1 Setup
Enabled	
Disabled	

The default factory setting of MBs-CM25E is

Terminator- Port3, Port4 all install

Password protection- Enable

For those applications that require the setting differ than the above default setting should make some modification according to the tables listed above.